

Operator Bulletin



July 26, 2007

VOLUME CONTROL RETURNS TO THE JUKEBOX

We have reinstated the Volume Meter control for NSM and Rock-Ola jukeboxes. Activating this feature lets you view the volume control on the juke's touchscreen while you are adjusting volume.

By default this feature is turned off. To use this feature for any of your jukeboxes, it must first be activated from Ecast Central.

HOW TO ACTIVIAATE VOLUME CONTROL

STEP ONE

Log into Ecast Central. From here there are two ways to access this feature:

STEP TWO

(a) From the main page (allows you to set feature for an individual location or entire route)

- Click on the *Configuration* tab
- Select individual location or entire route
- Scroll to the bottom of the page to set "Show Volume Meter" as "Yes" or "No"
Select yes to enable the volume meter and apply the changes

(b) From the *My Locations* page (allows you to set feature for individual locations)

- Click on Configure button for the appropriate location (button to the far right of your screen)
- Scroll to the bottom of the page to set "Show Volume Meter" as "Yes" or "No"
Select yes to enable the volume meter and apply the changes

For assistance, contact Customer Care at 866 HI ECAST